

PROGRAMMING QUICK GUIDE

Code	PIN Functions
00	Set all default values
*11*PIN*	Set PIN (PIN=4,5 or 6 digits)
*10*PIN*	Delete PIN
DOOR MONITORING FUNCTIONS	
*12*N*	Set Penalty Time (5 to 60 sec, default =5 sec.
*13*N*	Invalid PIN/Card Alarm, 0=Off, (default), 1=On
*20*N*	Door release time, 5 to 80 sec, default=5 sec.
*21*N*	Anti Follow Through, 0=off (default), 1=on,
*22*N*	Door Propped Alarm Delay, 1 to 255 sec., 0=Off (default)
*23*N*	Door Propped Alarm Duration, 15 to 255 sec., 0=door closed
*24*N*	Forced Door Alarm, 0=Off (default), 1=On
*25*N*	Door Switch Sense (see chart at right)
*90*N*	Self Test, 0=Off, 1=On

DOOR SWITCH INPUT

Jumper JP1	Door switch connections	Programming	
		*25*0* (default)	*25*1*
	T3-3 (GND) and T3-5 (DRSW)	Open door switch activates alarm	Closed door switch activates alarm
	T3-4 (24V) and T3-5 (DRSW)	Closed door switch activates alarm	Open door switch activates alarm

CC-8521BN Printed Circuit Board, Rel. 1.2

